


POINTS OF MEASUREMENTS ON A WOVEN SHIRT

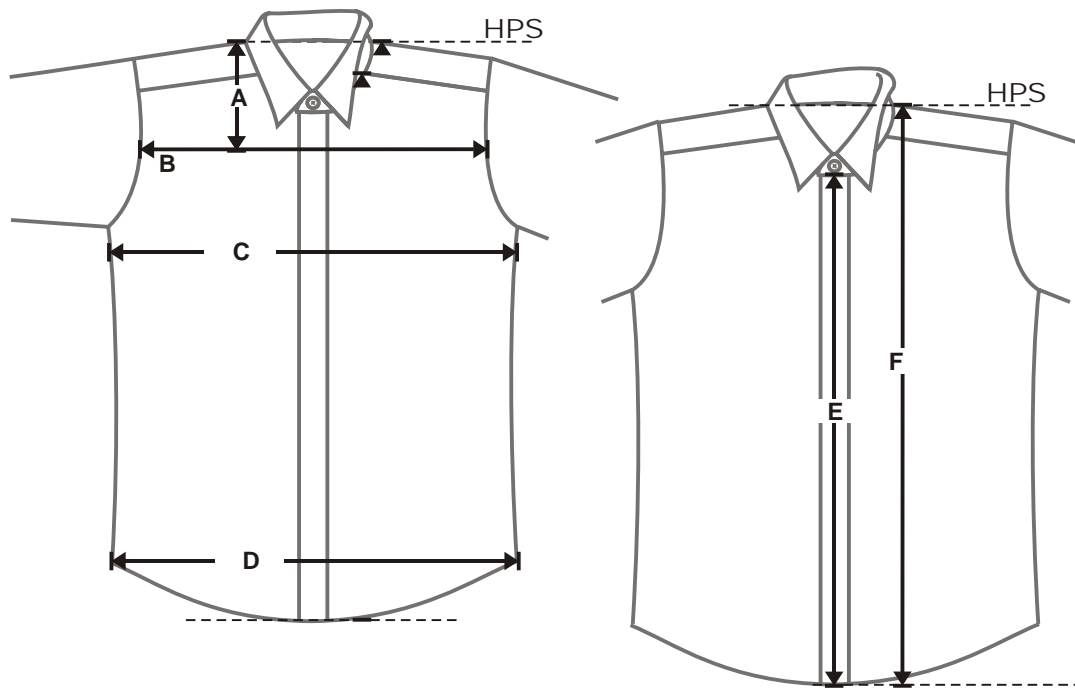

EXACT METHOD OF MEASUREMENT

- A - Front Mid Armhole Position: Measure 10 cm straight from High Point Shoulder
- B - Front Mid Armhole: Measure straight across front armhole to armhole seam.
- C - Chest: Measure 1" below underarm, straight across, outside edge to outside edge
- D - Bottom: Measure at bottom of garment, straight across front, outside edge to outside edge
- E - Centre Front Length from Neck: Measure straight from Centre from Neck Seam to the bottom of the garment.
- F - Front Length from High Point Shoulder (HPS): Measure from HPS straight to the bottom of the garment